


MASSAGE CHAIR

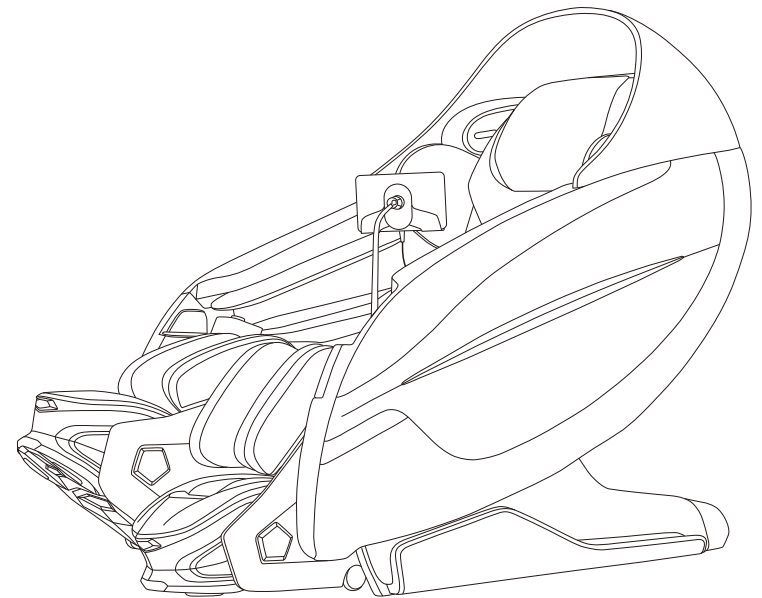

MODEL: ZENITH


CONTENTS

Please read and follow all safety and operating instructions listed in this user manual prior to use. Basic precautions should always be used when operating.

Safety Instructions	-----2-3
Product Specifications	-----4
Product Components	-----5-6
Chair Installation	-----7-9
Before Use	-----10
Remote Controller	-----11-12
Operation Guide	-----13-20
Trouble Shooting	-----21
Maintenance	-----22

Note: Our company reserves the right to revise the design and description of this product without any further notice.

MAINTENANCE

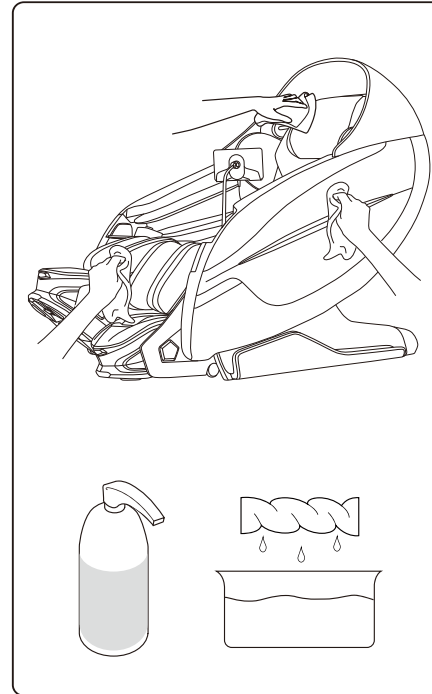


- Turn OFF and pull out the power plug before clean the massage chair, do not touch the power plug with wet hands.

- Use dry cloth to wipe and sweat and other besmirch.

- Please use neutral wash to wipe and lightly brush the chair.

- Please airing.

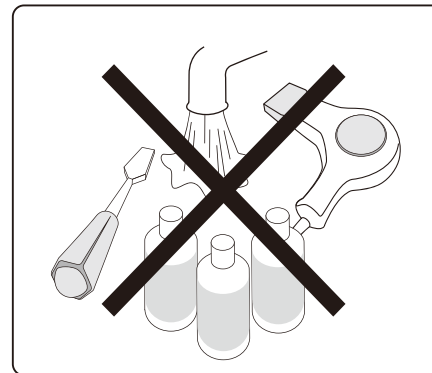

- Do not use water to clean the chair.

- Do not use alcohol, benzene wash and etc.

TROUBLE SHOOTING

If the sounds or movements are not normal, please turn off the massage chair and remove the plug from the electric outlet. Please contact the customer service department for further assistance.

Problem	Solution
The massage chair is connected to power but is not functioning.	<ol style="list-style-type: none"> 1. Check to see if the power plug is inserted properly or if the power outlet is functioning properly. 2. Check to see if the main power switch is in the "I" position.
The remote controller is responding, but the massage chair is not functioning.	The massage chair may have automatically shut down due to overheating protection devices. Please turn off the power and allow the chair to cool off for 30-50 minutes.
Both the remote controller and massage chair are not responding.	The massage chair automatically turns into "full stop" or into "idle" mode when a massage program is completed. Please press the power button again to turn on the chair.

SAFETY INSTRUCTIONS

Warning

The power plug must insert properly to the power outlet. If the connection of power plug is not connected properly it can result the risk of electric shock. Do not modify the power plug provided with the product. If the outlet is not suitable. Please make sure that the power outlet is properly installed by a qualified electrician. When using the massage chair, basis precautions should always be followed to reduce the risk of electric shock.

1. Please make sure that the power plug is properly inserted into the proper outlet.
2. Make sure that the power plug is properly inserted into the proper outlet to reduce the risk of short-circuit and fire.
3. Always unplug the massage chair from the electrical outlet immediately after use and before cleaning.
4. Do not use the massage chair in places where the humidity is high.
5. Do not use the massage chair for outdoors and avoid place with direct sunlight.
6. If the power goes OFF during use make sure to switch the power OFF position and removed the power plug out from power socket to prevent damage when the power is restored.
7. Do not operate the massage chair if the power cord is wet or damaged.
8. Do not plug or unplug the power cord from the power socket with wet hands.
9. Supervision is necessary when the massage chair is being used by or near the children. or disabled person.
10. Use the massage chair only for its intended use as described in this use manual.
11. Do not stand, sit or jump in the calves rest .backrest and armrest when the massage chair is in use to prevent any injury.
12. Do not fall asleep during the massage session.
13. Always keep the massage chair clean and do not insert any object into the gaps and around the massage chair.
14. Do not move the massage chair by pulling the power supply cord.
15. Always check whether the surface of the massage chair is torn or ripped before usage, if you found any unfamiliar rips in any area of the cloth in the backrest, do not use the massage chair, kindly contact the authorize service center for repair.
16. This appliance is designed for household use only.
17. For those people who suffering from illnesses, please consult doctor before use.

SAFETY INSTRUCTIONS

18. The following condition should consult doctors before use :

- Those who have malignant tumor
- Those who suffer from heart disease
- Those who are experiencing pregnancy, menstruation and puerperal fever
- Those who require complete rest
- Those who are under medical treatment
- Those who suffer from back problem or whose backbone is abnormal or bent
- Those who have osteoporosis

19. If you experience pain during usage, stop using the massage chair immediately, if any injuries occur, seek medical treatment immediately.

20. Do not massage the swollen or inflamed parts of the body.

21. This product is non-professional appliance designed to provide a comfortable massage.

Do not use this product as substitute for medical treatment.

22. Each massage session should not exceed 30 minutes. Massage the targeted area for only 15 minutes, over-massaging can lead to overheating , thus giving the appliance shorter lifespan.

23. Do not operate where aerosol(spray) product are used or where oxygen is being administered.

24. The massage chair is not suitable for children aged 12 and below.

NOTE:

This appliance is not intended for use by persons(including children) to reduce the physical sensory or mental capabilities, or lack of knowledge how to use the massage chair unless they have been given supervision or instruction concerning to use this appliance by the responsible person for their safety.

If the power supply cord is damaged, it must be replaced by a special or assembled available from the manufacture or its service agent .

The massage chair heats up during operation. persons sensitive to heat must take extra caution when using the massage chair .

OPERATION GUIDE

2 The method of playing the bluetooth music in massage chair:


A: Match: Open the bluetooth function in mobile phone or Ipad, and search nearby. choose the massage chair bluetooth function music equipment and match with it.

B: Play music: After matching with it, you can display the music by mobile or APP music display software.

Attention:

Please off the bluetooth connection when not in use so as for other devices to connect smoothly.


3 After use

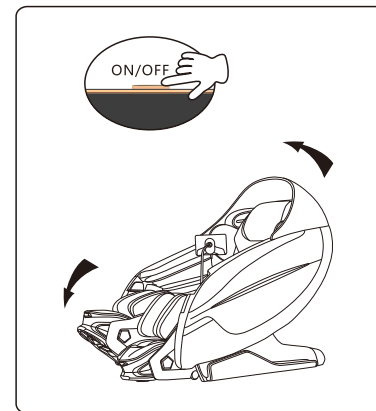

1) Press the power button to power off the massage chair.

*Make sure whether there are no barriers around the massage chair.

2) Get up when massage chair rest to initial state

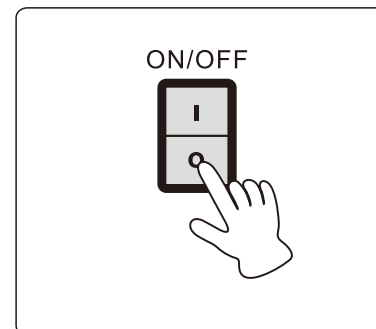

3) Turn off the main power switch.


4) Remove plug from power outlet.

* Please do not pull on the power cord to remove the plug.

* Please do not unplug with wet hands.

OPERATION GUIDE

9. Anti-pinch


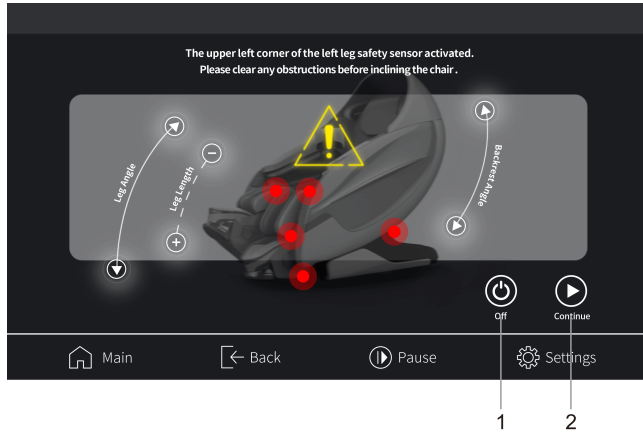


Please clear any obstructions before inclining the chair.
 Please check there are no any obstructions touched the chair, make sure safety.
 then press button 1 to continue massage, or press button 2 to turn off the chair.

PRODUCT SPECIFICATIONS

Description	Specifications
Product Name	Massage Chair
Model No.	Zenith
Rated Voltage	110-240V~
Rated Frequency	50/60Hz
Rated Power Consumption	290W
Carton Dimension	Main Body: 1460(L)x856(W)x1245(H)mm
	Foot: 620(L)x615(W)x650(H)mm
Weight	Main Body: N.W.: 136.5kg G.W.: 159.5kg
	Foot: N.W.: 31.5kg G.W.: 37kg


Main Body Diagram(Front)

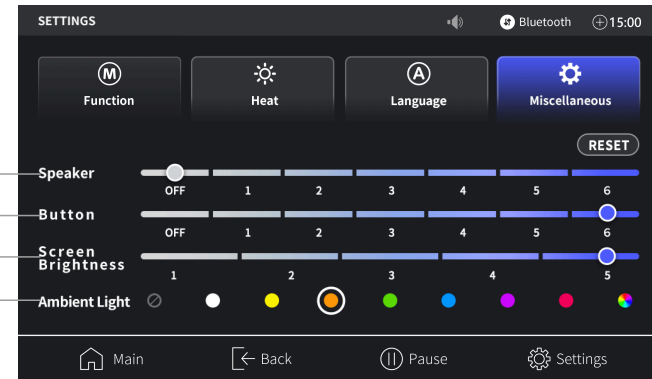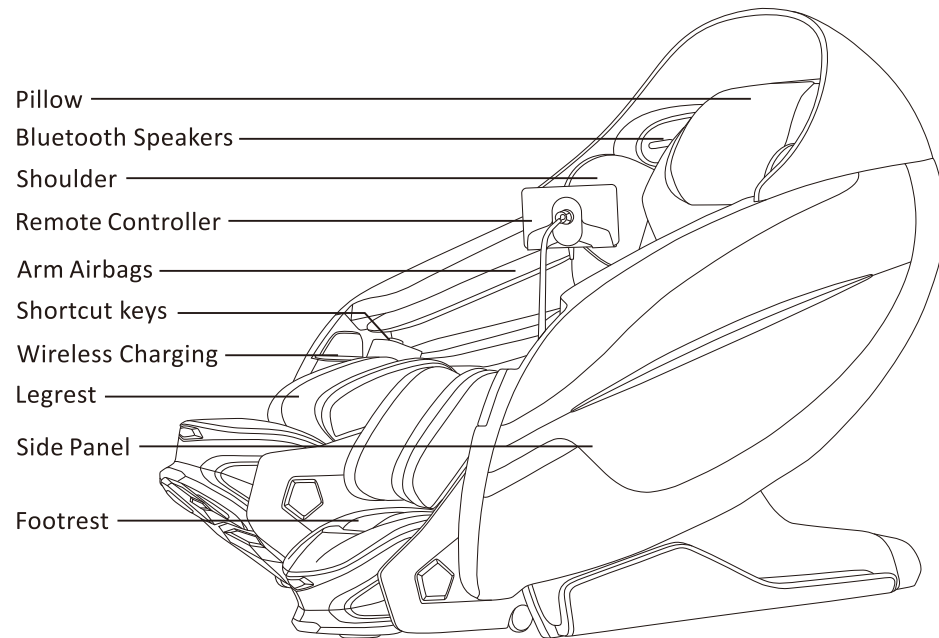

- 1. Speaker volume adjustment
- 3. Screen brightness adjustment

- 2. Button volume adjustment
- 4. Ambient light selection


8. Voice

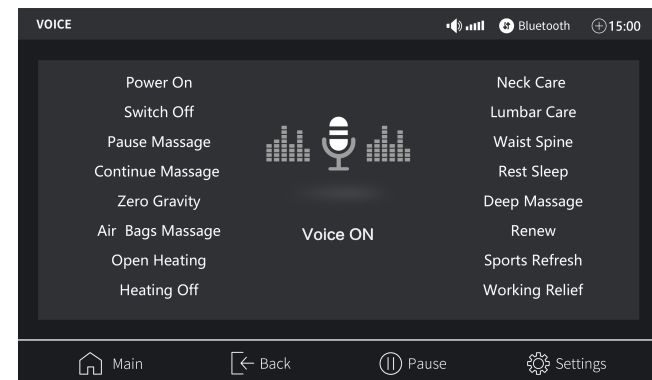

Call "Voice ON" and say the keywords as shown in the figure, and the massage chair will turn on the corresponding function.


OPERATION GUIDE

PRODUCT COMPONENTS

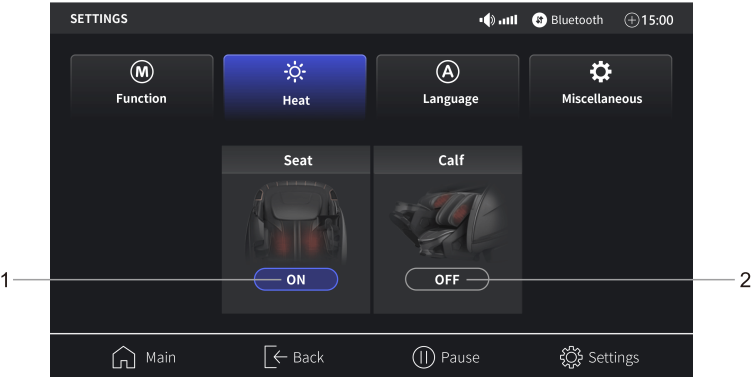


1.Seat heating: on/off

2.Calf heating: on/off

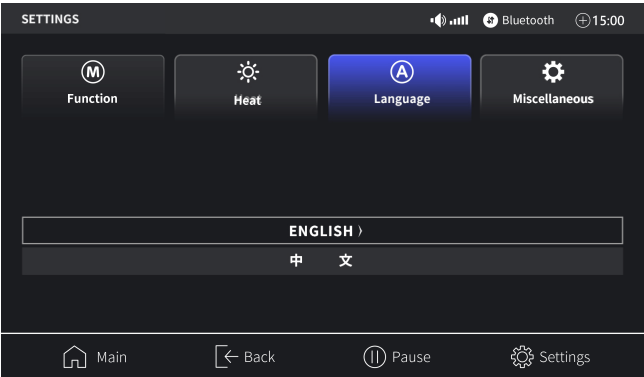

2 languages are available to choose: English, chinese


Main Body Diagram(Rear)

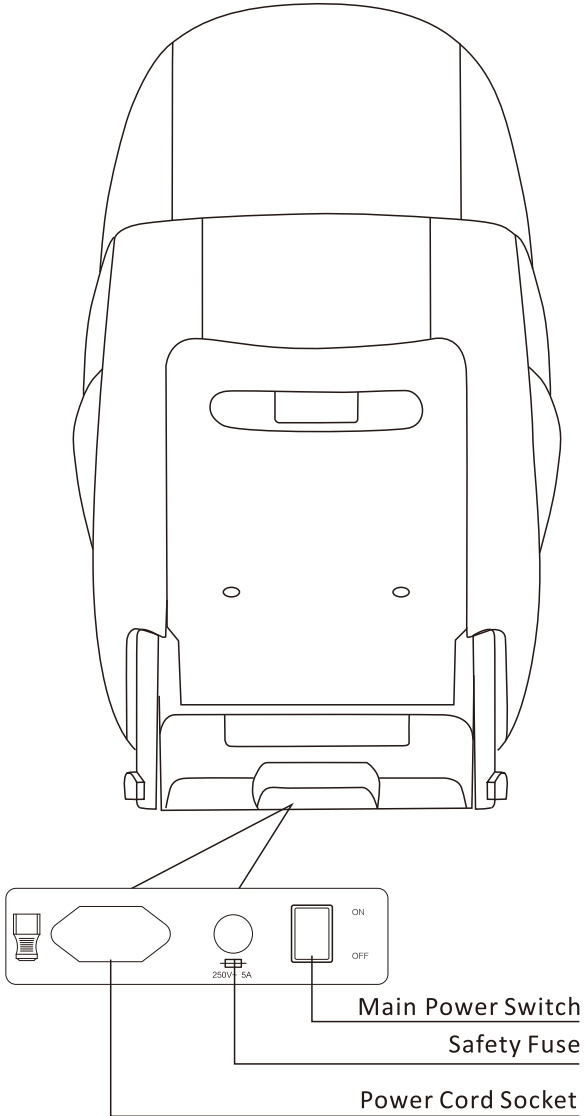

CHAIR INSTALLATION


OPERATION GUIDE

1 Install the hood

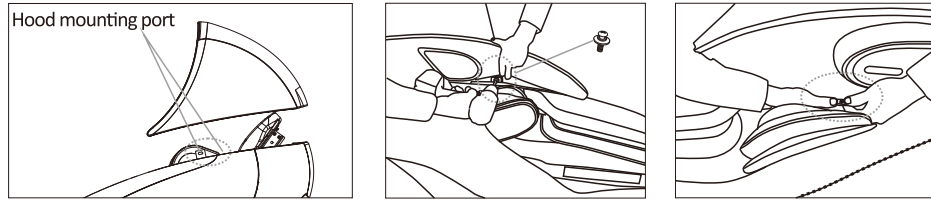

- (1) The hood mounting parts on both sides of the chair body are stuck into hood leather sleeve, and 1pc screw is locked on each side.
- (2) Locate and attach the wire terminals on the left and right sides of the hood to the wire terminals on the left and right sides of chair body, and then hide the wires that are connected well into the elastic cloth sleeve.
- (3) Finally, close both zipper on the underside of the hood.

2 Install Seat Cushion

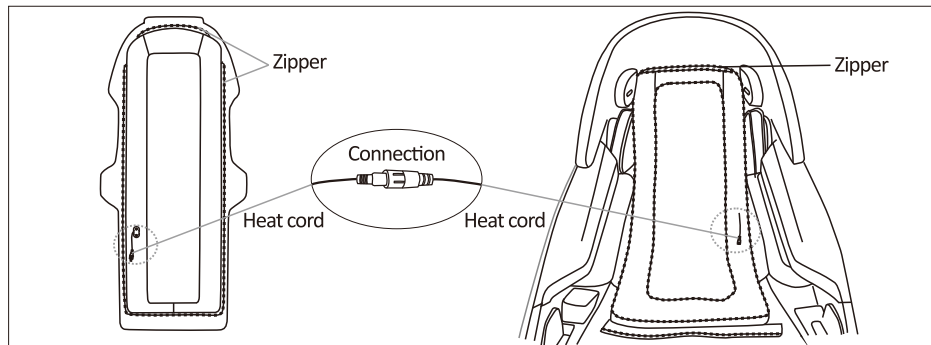


- (1) First, attach the heat cord in the seat cushion to the heat cord in the chair body.
- (2) At last, close the zippers on the seat cushion and massage chair.

6. Air



1. Airbag massage position selection
2. Air strength adjust

7. Settings

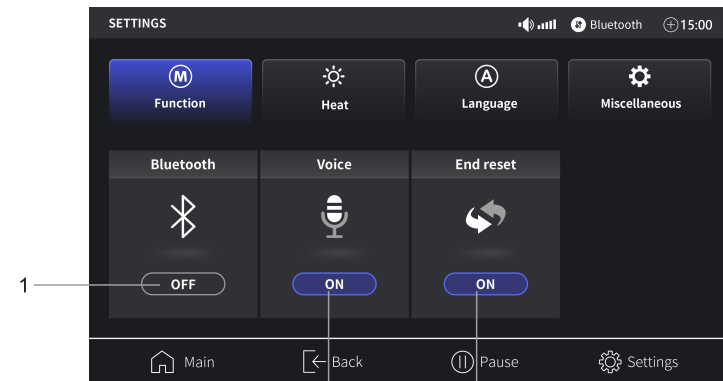


1. Bluetooth: on/off
2. Voice: on/off
3. Reset switch after completion

OPERATION GUIDE



- 1. Left and right leg lift and extension adjustment
- 2. 4D strength adjust
- 3. Gear box sonic strength adjust
- 4. Massage speed adjust
- 5. Air ionizer on/off
- 6. Massage indication
- 7. Heating on/off
- 8. Foot roller strength adjust
- 9. Hand roller strength adjust
- 10. Air strength adjust
- 11. Zero G position selection

5. Manual

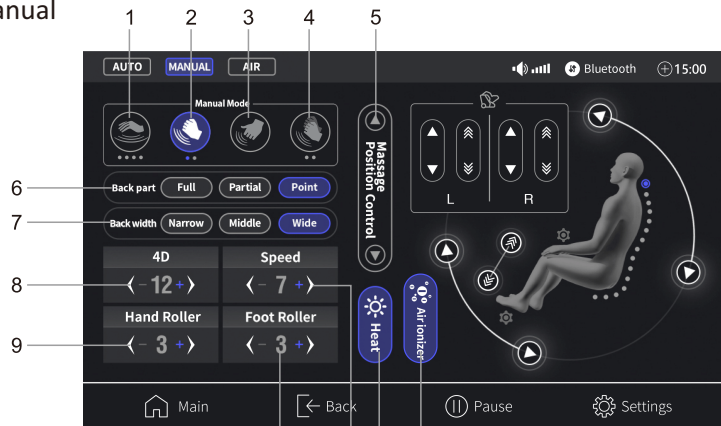


- 1. Kneading(4 massage mode)
- 2. Tapping(2 massage mode)
- 3. Acupressure
- 4. Clapping(2 massage mode)
- 5. Shoulder position adjust
- 6. Massage coverage(part): full, partial, point
- 7. 3 width setting: narrow, middle, wide
- 8. 4D strength adjust
- 9. Hand roller strength adjust
- 10. Foot roller strength adjust
- 11. Massage speed adjust
- 12. Heating on /off
- 13. Air ionizer on/off

15


CHAIR INSTALLATION

3 Install leg-rest

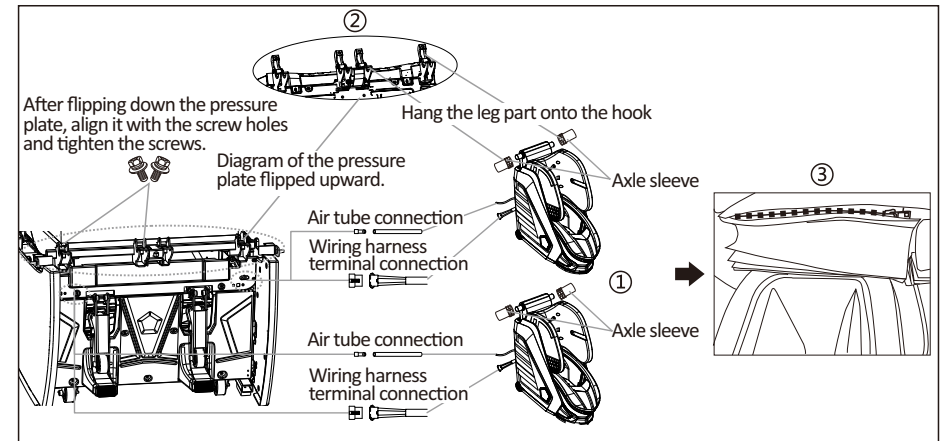

- (1) First, place the leg part in front of the massage chair. Remove the leg axle sleeve from the accessory box and install it onto the leg.
- (2) Insert the leg's air tube into the corresponding air tube at the front of the seat base, then insert the leg's wiring harness connector into the corresponding connector on the front of the seat base. Next, flip up the two pressure plates on one side being installed, hang the leg assembly on the hook, and flip the plates back down. Finally, align two screws with the screw holes in the pressure plates and tighten the screws one by one. The installation procedure for the other leg is the same.
- (3) Finally, zip up the cover cloth zippers on top of the left and right legs with the corresponding zipper on the main body of the seat.

4 Install remote controller

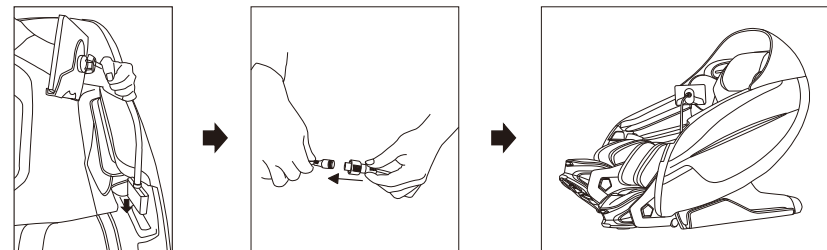


- (1) Push the controller bracket into the left slot of the massage chair.
- (2) Finally, join the connection between remote controller and massage chair.

8

CHAIR INSTALLATION

5 Moving the massage chair

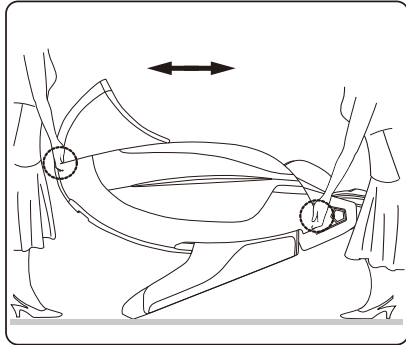


To move the massage chair 2 persons are required. One would hold the side panel and lift up as shown in the diagram. The next would press down the back-rest of the chair so that the castor wheels located at the back of the chair touch the floor.

Move the massage chair using the wheels. After moving to the desired location put the massage chair down slowly & carefully.

Note: Do not move the massage chair with user on it.

suggest moving the massage chair with a rung or carpet underneath to prevent any accidental damage to the floor.

6 Place the massage chair an open area


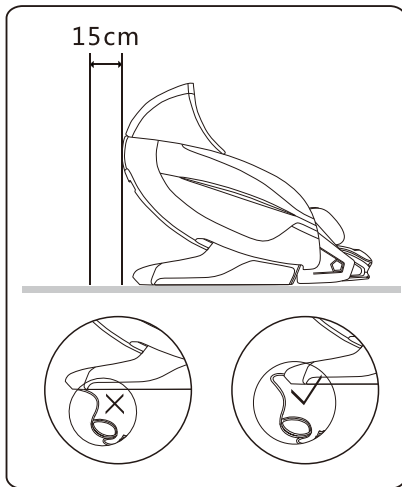


- Allow sufficient space around the chair for recline purposes. 15cm distance for the back side and 40 cm in front of the footrest.

- *In order to avoid the damage of the floor and to reduce the noise, please put area rug under the massage chair.
- *Make sure that there are no barriers in front and the back of the massage chair.
- *Please do not put it in wet or uneven floor.
- *To avoid signal interference, please place it 4 feet away from AV,TV, and radio.





OPERATION GUIDE

3. Body analyzing

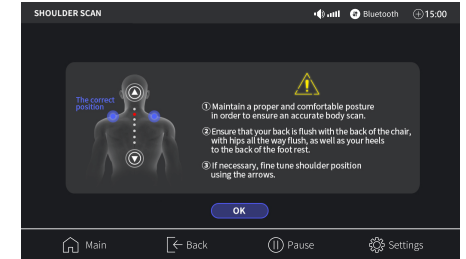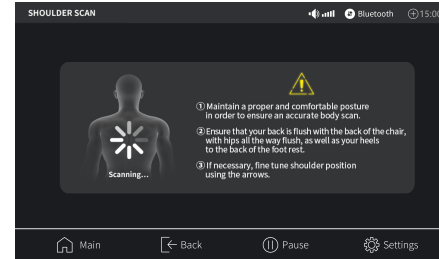

1. Massage chair will start by using state of the art technology in body analyzing.
2. Once completed, user are given an option (in 8 seconds) to fine tune 'shoulder position' according to user needs.

4. Auto

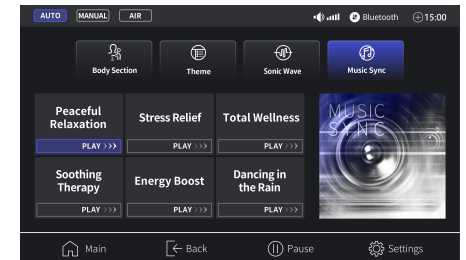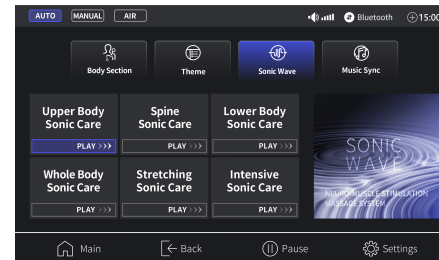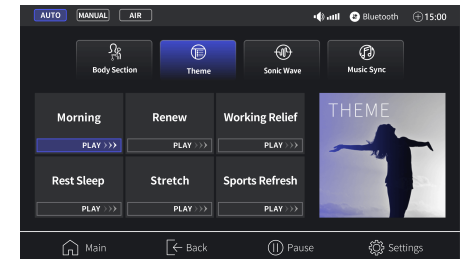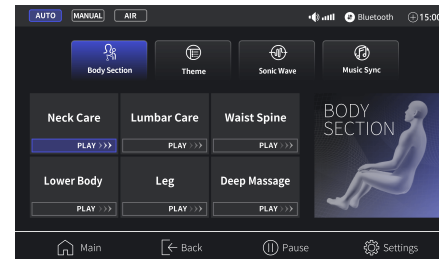


There are 24 kinds of all-round unique automatic massage modes in the corresponding massage area.

OPERATION GUIDE

BEFORE USE


1 Remote controller interface and description

1. Open the remote controller and the main menu will be displayed.
Please select the program you want.

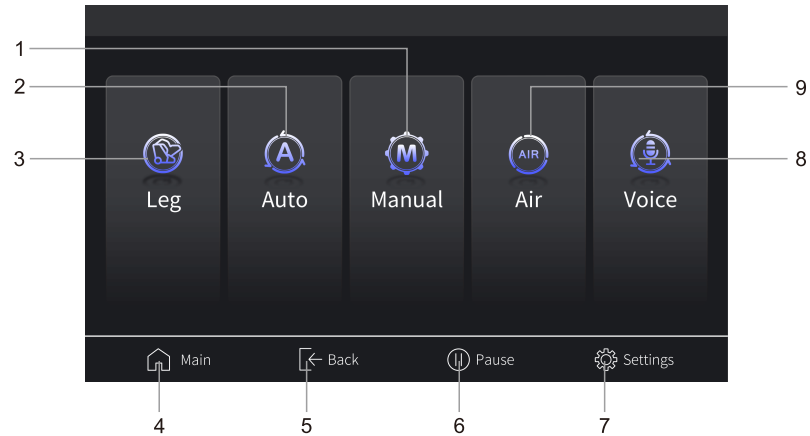


- 1.Manual 2.Auto 3.Leg 4.Main 5.Back
- 6.Pause 7.Settings 8.Voice 9.Air


2. Leg

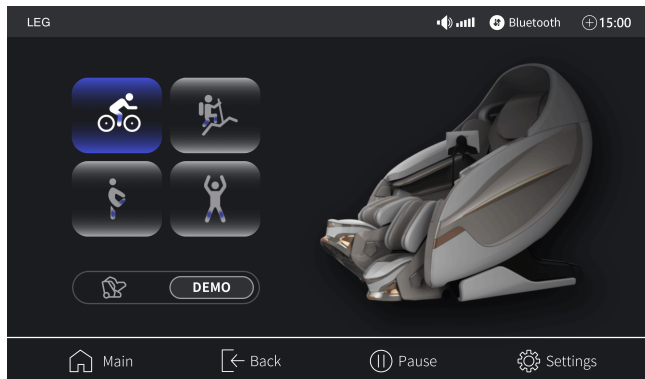


There are a total of 5 leg automation programs available for selection.

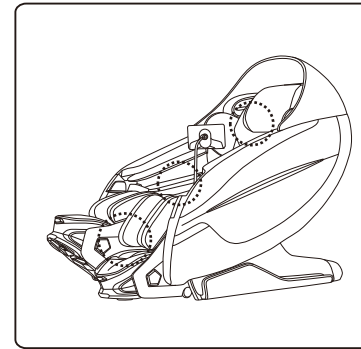


- 1. Make sure the product is in good condition and proper working order.**
 - Check the headrest and backrest pad.
 - Inspect the power plug.
 - Make sure the footrest is in its upright original position in order to prevent damage.

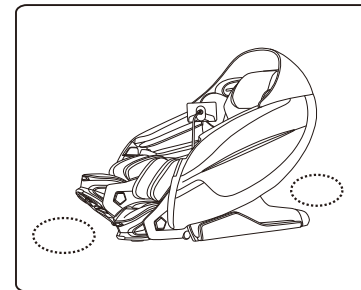

- 2. Check the surrounding environment**
 - Ensure there are no people, pets, or objects obstructing the massage chair.

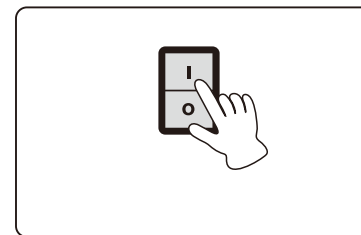


- 3. Plug in the massage chair power cord.**
 - Connect the power cord.
 - Turn ON the power switch, located on the right side of the massage chair.

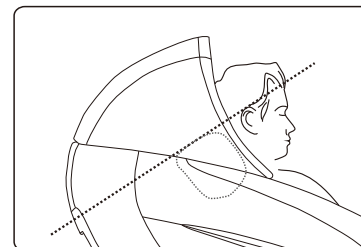

- 4. Adjust the position of the headrest.**
 - Adjust the headrest until it is in a comfortable position.

REMOTE CONTROLLER

Shortcut keys

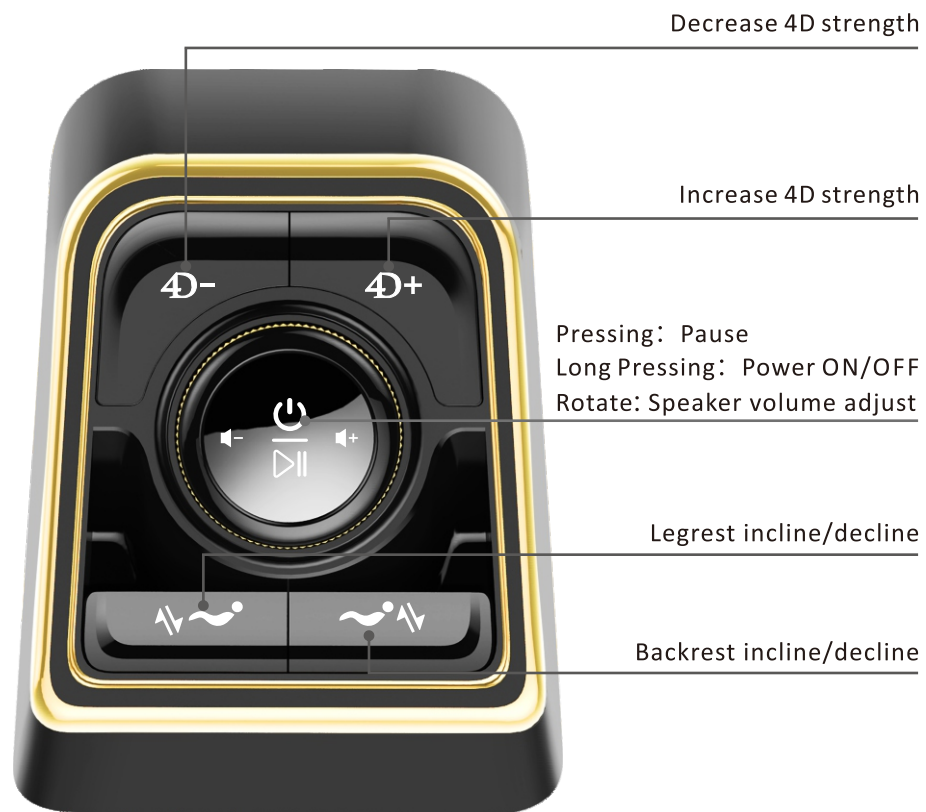

REMOTE CONTROLLER

Remote controller

